



Step 2: Mount the Headrail

Place the back/bottom lip of the headrail on the bottom lip of all brackets.

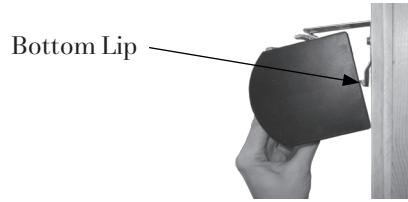

Push the front of the headrail firmly upwards and back until it snaps into place on all brackets.

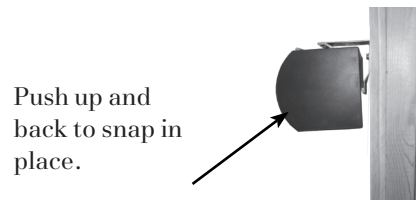

Step 3: Mount Cord Tensioner


IMPORTANT

In compliance with national safety regulations shades will not operate unless the cord tensioner is installed correctly! After the shade is installed, the cord tensioner must be secured to the wall.

1. Locate the tensioner as close to the shade as possible without interfering with the shade.

2. Make sure the screw hole (A) on the cord tensioner is pulled down before mounting. This will ensure the cord can move freely through the cord tensioner.

3. For IM installations attach the cord tensioner directly with a screw through the screw hole. For OM installations use the supplied mounting bracket (B).

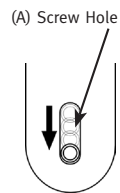

(B) Mounting Bracket

Care and Cleaning

It is recommended that Horizons™ Shades of Elegance Clutch periodically be vacuumed with a soft brush attachment. Wet cleaning of any shade is highly discouraged, especially those with cotton content.

For Horizons™ Shades of Elegance Clutch Mylar, clean with alcohol using a soft cloth that will not scratch the surface. Clean as you would a glass window, but take special care not to dent or wrinkle the shade.

Guarantee

Your Horizons™ Shades of Elegance Cassette is covered by a limited lifetime warranty. All colors tend to lose their original intensity over time, and pull cords eventually wear out. This is considered normal wear and tear, and is not covered by this Guarantee. Abuse, misuse and improper installation are not covered. Finally, color lots vary and may not exactly match the sample in your sample book or a previously ordered shade. Repair is the purchaser's sole remedy under this guarantee. B&W cannot be responsible for any installation costs nor costs of incidental or consequential damages.

B&W Window Fashions

1705 Waukegan Road • Waukegan, Illinois 60085

Installation Instructions for

Horizons™
by B&W

Shades of Elegance™ Cassette Roller Shades




Congratulations on
the purchase of your new Horizons™
Shades of Elegance Cassette Roller Shade!

Horizons™
by B&W


SMALL CASSETTE INSTALLATION

Step 1: Install the Brackets

Outside Mount: Install above the wood trim or window frame. Use the rear bracket holes.

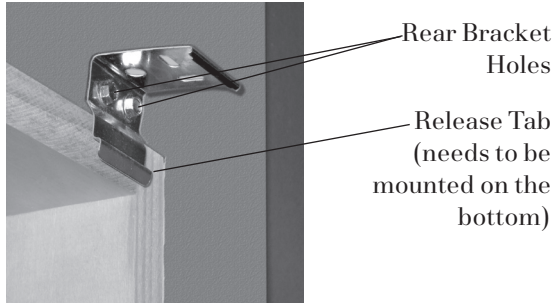

Inside Mount: Install inside the window frame. Use the top bracket holes.

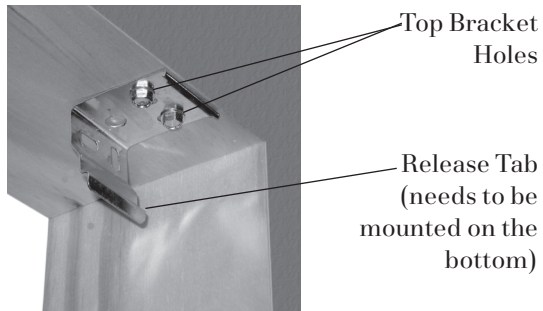


Install the two outside brackets first, no further than 2" in from each end of the headrail.

Install the remaining brackets evenly spaced in increments of 24" or less. Care should be taken to ensure all brackets are level.


Care should be taken to ensure all brackets are level.

Step 2: Mount the Headrail

Place the top middle lip of the headrail on the top lip of all brackets.

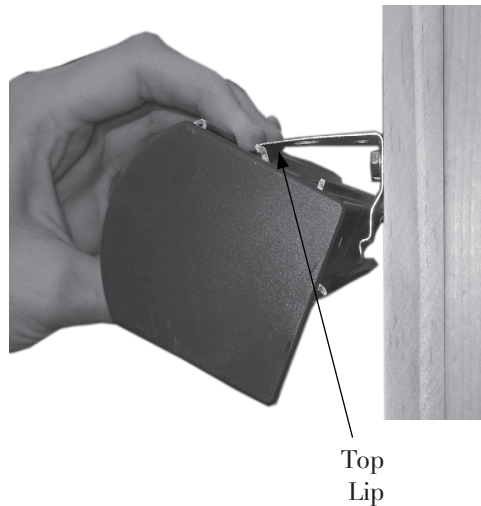

Push the bottom front of the headrail firmly backwards until the headrail snaps into place.

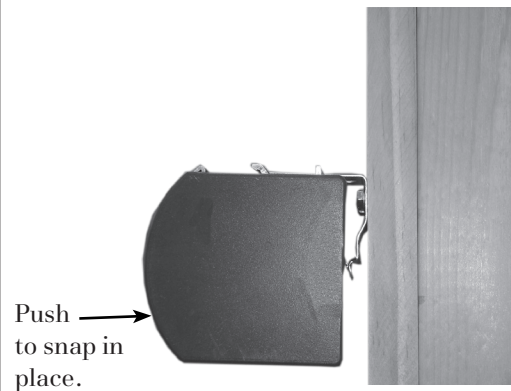


Installation is complete.


LARGE CASSETTE INSTALLATION

Step 1: Install the Brackets

Outside Mount: Install above the woodwork or window frame. Use the rear bracket holes.

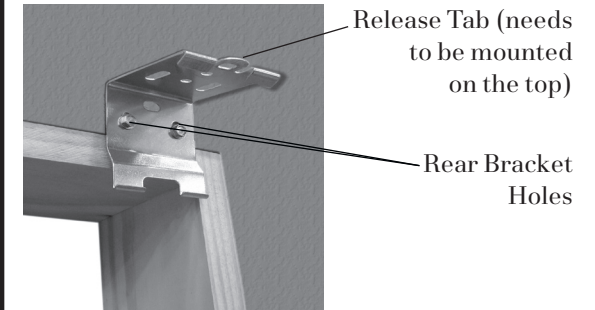

Inside Mount: Install inside the window frame. Use the top bracket holes.

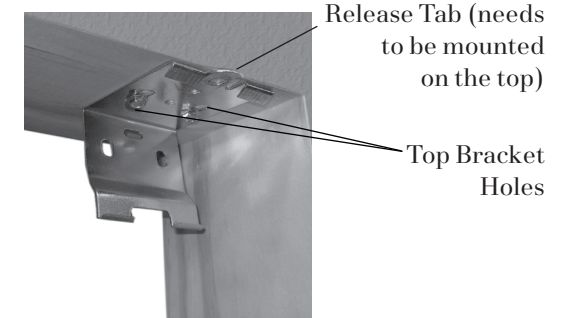

Install the two outside brackets first, no further than 2" in from each end of the headrail.

Install the remaining brackets evenly spaced in increments of 24" or less. Care should be taken to ensure all brackets are level.

Care should be taken to ensure all brackets are level.