

Measuring and Care Guidelines


Measuring Instructions

- Use a metal tape measure only.
- Round to the nearest 1/8".

Horizons™ Natural Shades

Inside Mount-


Measure the exact width and height of the window opening as shown. It is a good idea to check the inside width at the top middle and bottom of the window opening and give the narrowest width. We will deduct 1/2" from the width for clearance. Mark your order "Inside Measurements (IM)".

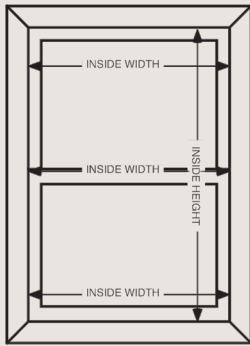

Be sure to check the "Size Limitations" section of your shade's "Information Sheet" for inside mount depth requirements.

Outside Mount-

Measure for the exact width and height of the area you wish to cover. The shade should overlap the window opening by at least 3" in width and height. Mark your order "Outside Measurements (OM)".

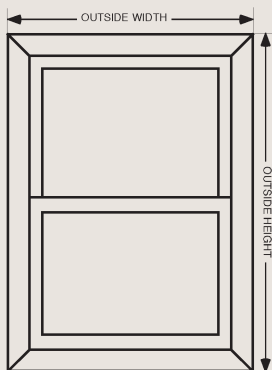

Cleaning

We suggest periodic vacuuming with a soft brush attachment. Due to the wide variety of natural products used to weave Horizons™ Natural Shades, wet cleaning is not recommended. To ensure their long life all Horizons™ Natural Shades are recommended for indoor use only.

Averté Natural Fold™

Outside Mount-

Width: Measure the exact width of the window or sliding door including the trim (if there is any). We recommend adding a minimum overlap of 3" on each side of the window. Additional overlap can also be added to allow for complete stack-back. See "Stacking Dimensions" on page A3 for details.

Height: Measure the exact height of the window or sliding door including the trim. If you want the Averté to go all of the way to the floor, measure to the floor. We recommend mounting the Averté to the wall above the window frame. At the top add 3" for the bracket height. Below the window add the distance you want the Averté to hang (usually about 2").

Inside Mount:

Width: Measure the exact width of the opening at the top where the track will be mounted. Be precise, the factory only makes a 1/4" deduction to the track's width to fit inside.

Height: Measure the exact height of the opening in three places (right, middle and left). Give the shortest height. The factory will deduct 1/2" from the total unit's height (which includes the track and carriers). When an inside mount Averté is ordered with a valance, the factory will also make the allowance for the valance board's thickness.

Please check page A3 for size limitations, installation configurations and stacking dimensions.

Élance™ Sliding Panels

Outside Mount-

Width: Measure the exact width of the window or sliding door including the trim (if there is any). We recommend adding a minimum overlap of 10" on each side of the window. Additional overlap can also be added to allow for complete stack-back. See "Stacking Space/ Panel Width" on page A5 for details.

Height: Measure the exact height of the window or sliding door including the trim. If you want the Élance to go all of the way to the floor, measure to the floor. We recommend mounting the Élance to the wall above the window frame. At the top add 3" for the bracket height. Below the window add the distance you want the Élance to hang (usually about 2").

Inside Mount:

Width: Measure the exact width of the opening at the top where the track will be mounted. Be precise, the factory only makes a 1/4" deduction to the track's width to fit inside.

Height: Measure the exact height of the opening in three places (right, middle and left). Give the shortest height. The factory will deduct 1/2" from the total height of the unit for an Inside Mount.

Important Note: The total fabric width will be 1" narrower than the width of the track. **This will cause 5/8" inch gap on the sides of an Inside Mount Élance™.** If this much gaping is a concern, please consider an Outside Mount.

Please check page A5 for size limitations, installation configurations and stacking dimensions.